


Smart Store Platform Support:

Admin Screensaver

Adding a Screensaver

The adding of a screensaver is done through the Admin back office.

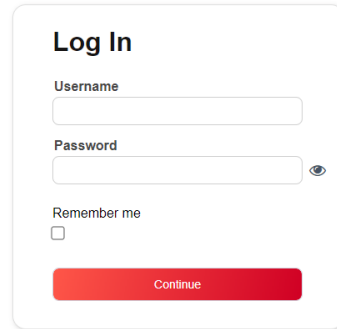


A login form titled "Log In" with the following fields and elements:

- Username:
- Password: with an eye icon for visibility toggle
- Remember me:
- Continue:

Upload image to Admin and use on kiosk.

To upload an image follow these few steps. This is the picture that you will have as your screensaver.

Navigate to *Network > Media Upload*

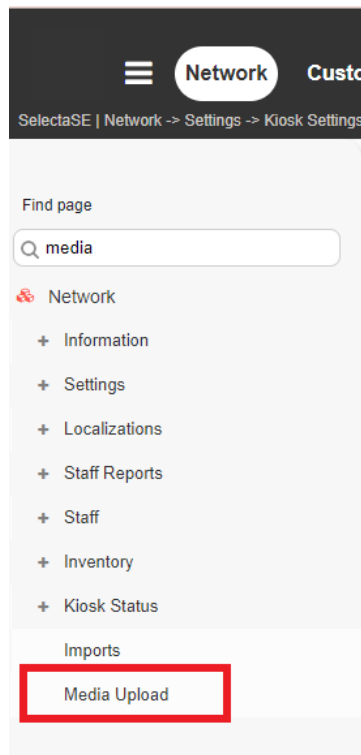

Under the select media type tab select Background Image / Logo, then under Media name write the name you want for the image. Click the Browse button and select the image required and click Upload (make sure that the image is PNG).

Operator | Network -> Media Upload

Media upload

Media ID	Media Type ID	Media Name
16	28	amex_london_new.png
15	26	ai_5100R_Starnutrition_PWO-shot-Tropical_feb20.png
13	18	main_mainscr.png
12	28	bkgimg.png
11	26	ai_addimg.png
10	26	ai_start2.png
9	26	ai_start1.png
8	28	test_nino_2023.png
7	20	video_3cf0f7b255560e1d05722c1bd51ea856sample.mp4
5	28	test_logo.png
2	26	ai_test.png
1	26	ai_ws.png

Upload media object

Select media type
Background Image / Logo

Media name
amex_london_new

amex_london_new.jpg

Upload

Preview

When the image is uploaded go to: *Network > Settings > Kiosk Settings*
 Then go to Kiosk/Location tab and then search for the kiosk in question. And then in the key field search for the values:
StartPageImage, for changing the start page image, add the name of the startpage image you just uploaded with the extension .png at the end and then:
ShowStartPageOverlay, write True in the value field.

Kiosk Settings ?

Default
Overview
Group
Default
Kiosk/Location
Private

Kiosks
Locations
Value
Include Test Kiosks

↓ 342
Free text search
↓ Identifier
Free text search

SettingType	Location ID	Affected Kiosks	Key	Description	Default Value	Value
LOCATION	1425	342	ShowStartPageOverlay		False	True
LOCATION	1425	342	StartPageImage			amex_london_new.png
LOCATION	1425	342	StartPageVideos			

Localizations:

There is a default text saying "Hi! Tap to enter." when adding a screensaver if you don't want this to show on your kiosk you can easily remove those two localizations in admin, just remove the text and write a space and then click next to the field and it should be green which means it saved. Note that there can be only one localization override per key word in each database so either by operator or store name etc.

Look for these localizations:

start_page_hi & start_page_tap_to_enter

Localizations by group

Group by value
Owner/Operator... none

Keyword	Default text	Description	Group By	Group Value	English	German
start_page_hi_start_page						
start_page_hi	start_page_hiMISS	Not set	Owner/Operato...	1		
start_page_tap_to_enter	start_page_tap_to_enterMISS	Not set	Owner/Operato...	1		

Update/sync:

The changes will be updated automatically after some time but if you need the change immediately follow these steps:

Sync the settings and the files on the kiosk (on the sync page). Then just restart the kioskware through the merchandiser view.

Kiosk ID: Z3

DOORS LOCKED Logout

UTILITIES

Utilities

Utilities are tools to help troubleshoot issues and check cabinet performance.

Tests Connected Shelves Sensors **Actions**

Chip and Pin: Payter

Override lock until: 1800 Override Lock

Will close down Kioskware so that you can restart it from the top left corner. **RESTART KIOSKWARE**

Will reboot the computer. RESTART COMPUTER

Will shutdown the computer. SHUTDOWN COMPUTER

Will restart the IQ boxes. REBOOT IQ BOXES

Will stop/start the IQ boxes services. STOP/START IQ BOXES

Display the cameras stream. SHOW CAMERAS

Press Maintenance Screen when cabinet is out of service. MAINTENANCE SCREEN

